



## **S-Mount-P**

Powered Magnetic Tablet Mount

**Thank you for purchasing the Powered S-Mount.**

**If you have any questions, please call us: 602-759-9559**

**Included parts:**

- 1 ea. S-Mount magnetic mount, with power supply
- 1 ea. Rubber Face Material
- 1 ea. Black tablet adapter
- 2ea. Wire Nuts
- 2ea. Alcohol Cleaning Pads
- 2ea. #6 x 1.25" Philips head screws
- 1 ea. Mfi 8-pin charging wire
- 1 ea. Micro USB charging wire
- 1 ea. Micro-C charging wire

**\*\*\*NOTE: Make sure your hands are clean and free of oils prior to installing this product.**

**Caution: This product requires connection of High-Volt power which can be dangerous and potentially deadly. A qualified Electrician should connect the high volt power wires.**

## **Preparation**

At the desired S-Mount-P location you will need a plastic electrical box with a 120v/240v wire. An 18cu. in. or larger enclosure is recommended, but a 14cu. in. will work.

The S-Mount can be orientated vertical or horizontal as shown in this manual.

## Installation instructions


**\*\*\*Make sure the power is off to the circuit before proceeding\*\*\***

1. Use the supplied wire nuts to connect the S-Mount's power supply to the wall circuit. Connect either of the S-Mount-P wires to the white "neutral" wire, and the other to the black "hot" wire. The bare copper or green ground wire does not get connected.



2. Carefully place the power supply into the electrical box as far as possible, it will need to be at least 1/2" in from the face of the electrical box for the S-Mount to fit.

Decide which direction would like the charging port to face prior to mounting. You may need to change the direction of the power supply for the cable to reach. DO NOT force or stretch the wires.

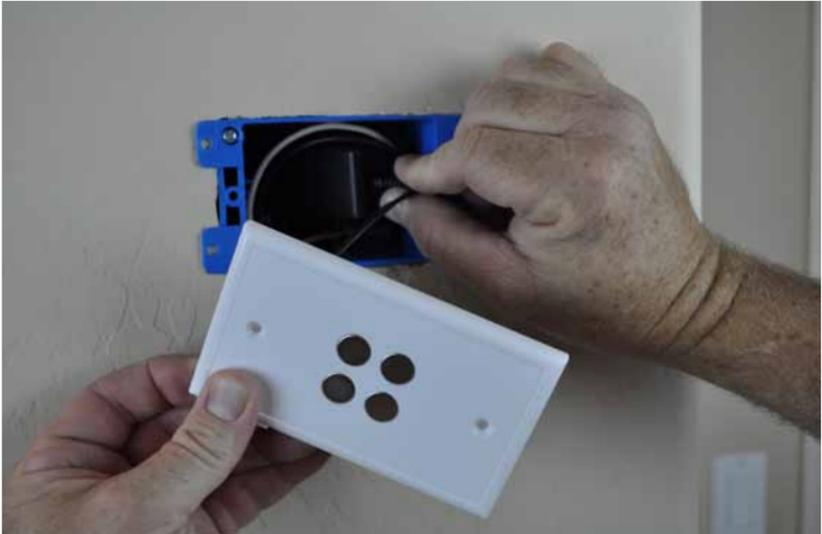

- Using the supplied #2 Philips head screws, mount the plate. Make sure the S-Mount is tight to the wall. Do not overtighten and bend the S-mount, the face should remain flat.

Turn on the power to the circuit. Skip to steps 9 & 10 to temporarily connect the tablet and make sure it is charging. Do this PRIOR to attaching the rubber face. If it is not charging, turn off the power and check the connections to the power supply.

Contact us for any technical assistance - 602-759-9559



**Take your time on these next steps. Once applied the rubber face cannot be moved. It is extremely sticky and will adhere instantly.**

**Make sure your hands are clean.**

4. Peel back and fold the protective covering from one long edge of the rubber face.



5. Starting at one corner, align the long edge of the rubber face to the indent on the S-Mount. Adjust as necessary. Once the alignment is perfect, then press the edge onto the S-Mount.



6. Remove the remaining backing from the rubber face. Carefully attach the remaining face rubber, lining it up with the edges as you work your way across. Be sure to press out air bubbles as you attach the rubber.

You can pierce the rubber with a small needle to let out trapped air bubbles if necessary.



7. Use a supplied alcohol pad to clean the rear of your tablet.



8. Remove the protective backing from the tablet adapter. Find the center of the tablet, then line up the adapter so that it is evenly spaced. Place one edge of the adapter against the tablet as shown. Once you have confirmed the adapter is centered, rest the adapter against the tablet and press into place.



9. Locate the correct charging wire for your device.


Carefully plug the angled connector into the side of the S-Mount-P. It is best to use a finger to press the connector straight in, forcing it at an angle may damage the wire or the S-Mount-P.



10. Plug the other end of the wire into your tablet. Then, attach the tablet to the S-Mount-P. Route any extra wire behind the tablet so that it is hidden from sight.



11. Access the settings on the tablet and set the brightness to "Auto" or "Automatic". Turn off any unused items such as Bluetooth.

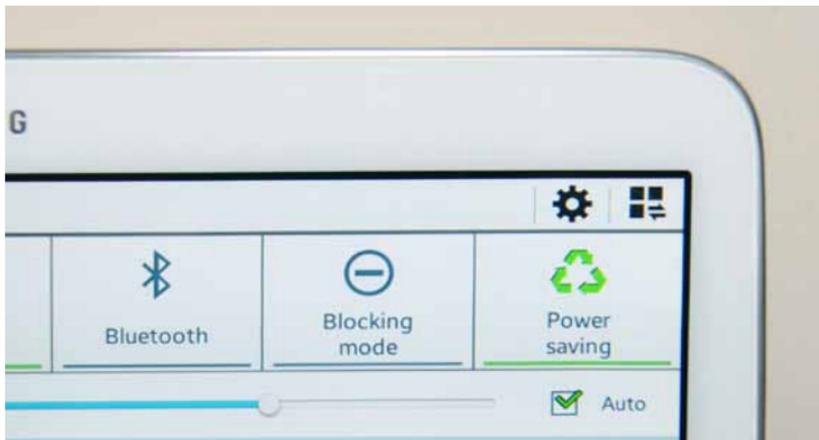

## LIMITED WARRANTY

This warranty remains in effect for two years from the date of purchase for all products.

THIS WARRANTY PROTECTS THE ORIGINAL OWNER PROVIDING THAT THE PRODUCT HAS BEEN PURCHASED FROM AN AUTHORIZED INTUITIVE DEALER OR FROM INTUITIVE LLC. THE ORIGINAL BILL OF SALE MUST BE PRESENTED WHENEVER WARRANTY SERVICE IS REQUIRED. FOR WARRANTY SERVICE OUTSIDE THE UNITED STATES, CONTACT THE AUTHORIZED INTUITIVE DISTRIBUTOR IN THE COUNTRY WHERE THE PRODUCT WAS PURCHASED.

Except as specified below, this warranty covers all defects in material and workmanship. The following are not covered: Damage caused by accident, misuse, abuse, product modification or neglect, damage occurring during shipment, damage from failure to follow instructions contained in the Owner's Manual, damage resulting from the performance of repairs by someone not authorized by Intuitive, or any claims based on misrepresentations by the seller. This warranty does not cover incidental or consequential damages. It does not cover the cost of removing or reinstalling the unit. THIS WARRANTY IS VOID IF PURCHASED FROM AN UNAUTHORIZED DEALER ON THE INTERNET (WORLD WIDE WEB), MAIL ORDER, 800, 888, 877 TELEPHONE NUMBERS OR THROUGH A CATALOG.

This warranty gives you specific legal rights. You may also have other rights, which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above may not apply to you.

Please make note of the following information and retain for your record.

Product Name \_\_\_\_\_ Model Number \_\_\_\_\_  
Store Name \_\_\_\_\_ Purchase Price \_\_\_\_\_

## HOW TO OBTAIN SERVICE

Please call us at (602) 759-9559, or write to: INTUITIVE (Attention: Customer Service Department), 3120 W. Carefree Hwy, 1-323, Phoenix, AZ 85085.

We will promptly advise you of what action to take. We may direct you to an authorized Intuitive Service Center or ask you to send your speaker to the factory for repair. You will need to present the original bill of sale to establish the date of purchase. PLEASE DO NOT SHIP YOUR ARTISON PRODUCT TO THE FACTORY FOR REPAIR WITHOUT PRIOR AUTHORIZATION. ANY PRODUCT RETURNED WITHOUT AUTHORIZATION WILL BE REFUSED. You are responsible for transporting your product for repair and for payment of any initial shipping charges. However, we will pay the return shipping charges if the repairs are covered under warranty.