



S-Mount-POE

Power Over Ethernet
Magnetic Tablet Mount

Thank you for purchasing the S-Mount-POE

If you have any questions, please call us: 602-759-9559

Included parts:

- 1ea. S-Mount-POE magnetic tablet mount
- 1ea. Rubber face material
- 1ea. Black tablet adapter
- 2ea. Alcohol cleaning pads
- 2ea. #6 x 1.25" Phillips head screws
- 1ea. Mfi 8-pin charging wire
- 1ea. Micro USB charging wire
- 1ea. Micro-C charging wire

******NOTE: Make sure your hands are clean and free of oils prior to installing this product.***

Preparation

At the desired S-Mount-POE location you will need:

- A plastic cut-in ring or electrical box installed (14cu in minimum)
- CAT5/CAT6 wire run to your POE network switch or S-MOUNT-POE-1 location. Both ends terminated with 8-Pin network connectors.
- #2 Phillips head screwdriver

Installation instructions

At the POE Switch/Injector location

1. Plug the power cable into the S-Mount-POE-1 injector (Sold Separately).
2. Plug the Cat5/Cat6 cable that runs to the tablet mount location into the S-Mount-POE-1. Make sure to plug into the "Data & Power Out".



At the tablet mount location

3. Plug the wire from the rear of the tablet mount into the "DC out" port, be careful to not stretch or damage the wire.



4. Plug the Cat5/Cat6 cable that runs from the injector into the rear of the S-Mount-POE. If the connection is good, both LED's will light.



5. Using the supplied #2 Philips head screws, mount the plate. Make sure the S-Mount is tight to the wall. Do not overtighten and bend the S-mount, the surface should remain flat with the screws flush with the face.



Take your time on these next steps. Once applied, the rubber face cannot be moved. It is extremely sticky and will adhere instantly.

Make sure your hands are clean.

6. Peel back and fold the protective covering from one long edge of the rubber face.




7. Starting at one corner, align the long edge of the rubber face to the indent on the S-Mount. Adjust as necessary. Once the alignment is perfect, then press the edge onto the S-Mount.



8. Remove the remaining backing from the rubber face. Carefully attach the remaining face rubber, lining it up with the edges as you work your way across. Be sure to press out air bubbles as you attach the rubber.

You can pierce the rubber with a small needle to let out trapped air bubbles if necessary.

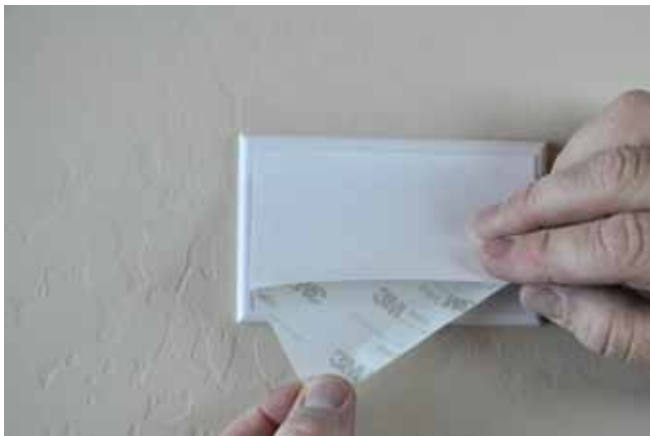

9. Use a supplied alcohol pad to clean the rear of your tablet.



10. Remove the protective backing from the tablet adapter. Find the center of the tablet, then line up the adapter so that it is evenly spaced. Place one edge of the adapter against the tablet as shown. Once you have confirmed the adapter is centered, rest the adapter against the tablet and press into place.



11. Locate the correct charging wire for your device.

Carefully plug the angled connector into the side of the S-Mount-P. It is best to use a finger to press the connector straight in, forcing it at an angle may damage the wire or the S-Mount-P.


***Note - The connector may not plug completely into the tablet mount, this is by design. DO NOT force the connector into place.



12. Plug the other end of the wire into your tablet. Then, attach the tablet to the S-Mount-POE. Route any extra wire behind the tablet so that it is hidden from sight.



13. Access the settings on the tablet and set the brightness to "Auto" or "Automatic". Turn off any unused items such as Bluetooth.

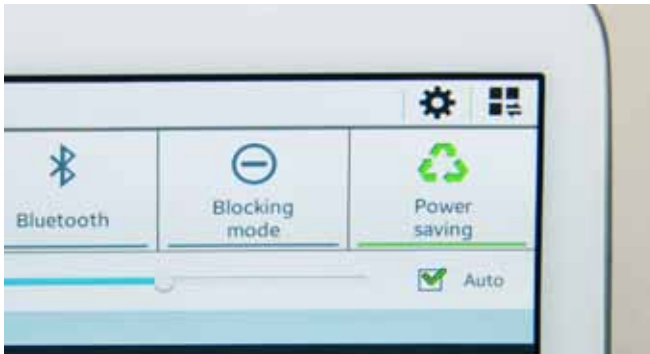

LIMITED WARRANTY

This warranty remains in effect for two years from the date of purchase for all products.

THIS WARRANTY PROTECTS THE ORIGINAL OWNER PROVIDING THAT THE PRODUCT HAS BEEN PURCHASED FROM AN AUTHORIZED INTUITIVE DEALER OR FROM INTUITIVE LLC. THE ORIGINAL BILL OF SALE MUST BE PRESENTED WHENEVER WARRANTY SERVICE IS REQUIRED. FOR WARRANTY SERVICE OUTSIDE THE UNITED STATES, CONTACT THE AUTHORIZED INTUITIVE DISTRIBUTOR IN THE COUNTRY WHERE THE PRODUCT WAS PURCHASED.

Except as specified below, this warranty covers all defects in material and workmanship. The following are not covered: Damage caused by accident, misuse, abuse, product modification or neglect, damage occurring during shipment, damage from failure to follow instructions contained in the Owner's Manual, damage from faulty wiring, damage resulting from the performance of repairs by someone not authorized by Intuitive, or any claims based on misrepresentations by the seller. This warranty does not cover incidental or consequential damages. It does not cover the cost of removing or reinstalling the unit. THIS WARRANTY IS VOID IF PURCHASED FROM AN UNAUTHORIZED DEALER ON THE INTERNET (WORLD WIDE WEB), MAIL ORDER, 800, 888, 877 TELEPHONE NUMBERS OR THROUGH A CATALOG.

This warranty gives you specific legal rights. You may also have other rights, which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above may not apply to you.

Please make note of the following information and retain for your record.

Product Name _____ Model Number _____
Store Name _____ Purchase Price _____

HOW TO OBTAIN SERVICE

Please call us at (602) 759-9559, or write to: INTUITIVE (Attention: Customer Service Department), 3120 W. Carefree Hwy, 1-323, Phoenix, AZ 85085.

We will promptly advise you of what action to take. We may direct you to an authorized Intuitive Service Center or ask you to send your speaker to the factory for repair. You will need to present the original bill of sale to establish the date of purchase. PLEASE DO NOT SHIP YOUR ARTISON PRODUCT TO THE FACTORY FOR REPAIR WITHOUT PRIOR AUTHORIZATION. ANY PRODUCT RETURNED WITHOUT AUTHORIZATION WILL BE REFUSED. You are responsible for transporting your product for repair and for payment of any initial shipping charges. However, we will pay the return shipping charges if the repairs are covered under warranty.